



PRIVA PARK® LEAFLET

ALL IMPORTANT ! Before installing your PRIVA PARK®, you have must to recharge the suitcase.

- Slip the cover toward the opposite side of the ring to open the PRIVA PARK® .
-Raise the cover.
-Take out the suitcase.
-Take the remote control, which is between the electric jack arm and the motor.
-Connect the mains cord of the suitcase to 220 V/ 50 Hertz.
-Place on charge for 12 hours (the LED which is on the side of the suitcase is on).
-The full charge is signalled by the light switching off or by the flashing of the LED.

-Open your remote control and choose a code, using the switches.

Once it is programmed, your PRIVA PARK® will only understand this code. If you wish to change it, unplug the suitcase, choose your new code (make sure you make a note of it) and plug the suitcase back in, in order to re-programme your PRIVA PARK® .

In order to replace your remote control if need be (loss or theft), make a note of its code in following table by ticking the appropriate boxes. Please note that button number 9-11-12 are inoperative. Keep this document in a safe place.

ON

Table with 12 columns and 2 rows. Row 1: empty cells. Row 2: cells numbered 1 to 12. Columns 9, 11, and 12 are shaded grey.

A) TO INSTALL YOUR PRIVA PARK®, YOU NEED :

 
- An electrical drill
- a drill Ø 12
- 4 rawplugs Ø 12
- 4 screws Ø 10X80
- 4 washers Ø 10

1. The position of **PRIVA PARK**[®] depends on two conditions :

- The width of the passage
- The opening of the angle between the passage and your parking place.

The wider they are, the farther **PRIVA PARK**[®] will be situated from the entry of your parking place. To give you an idea, you have to fix your appliance 1 meter from the entry of the parking place.

2. **PRIVA PARK**[®] is totally resistant to an impact at 40 ° angle, but if a vehicle bumps into one of the lateral parts your appliance can be damaged. That's why we advise you to install protection barriers on the white lines marking your parking place, on each side of **PRIVA PARK**[®].


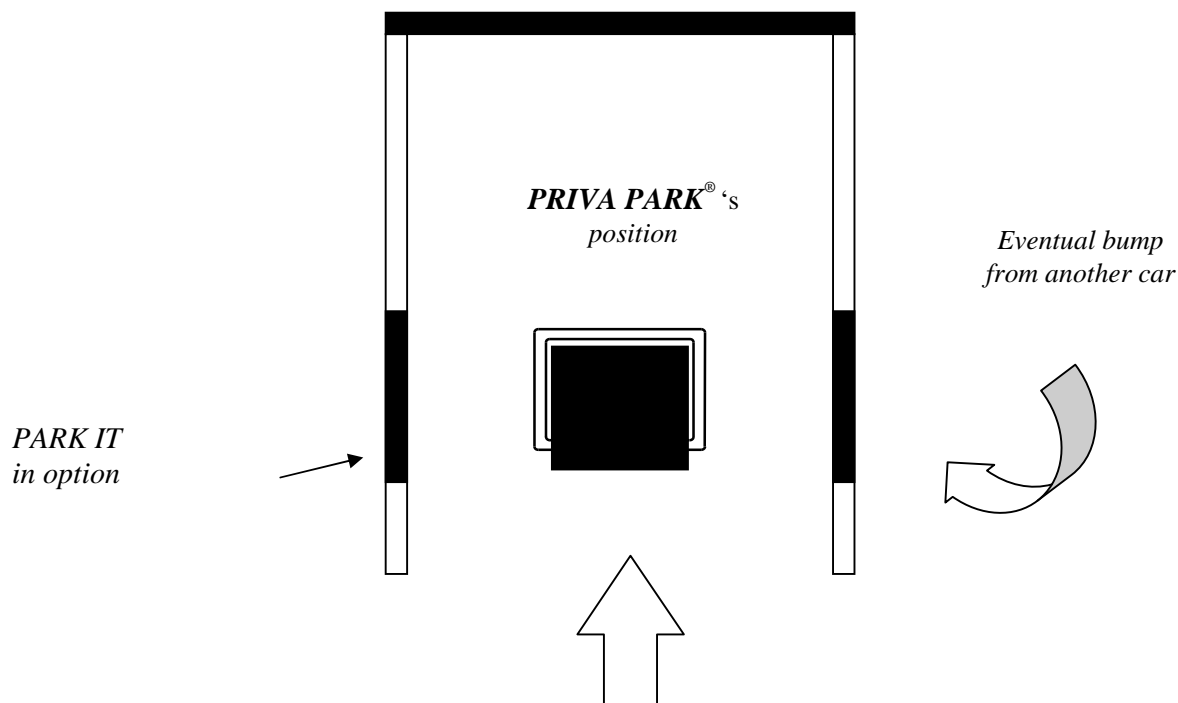


When it is installed, the PRIVA PARK[®] must be under the vehicle at the level of the fuel tank when it is in the lowered position.

*Mark and made 4 holes, put the rawplugs and fix the base with 4 screws.
Your **PRIVA PARK**[®] is now in place.*

B) PUTTING INTO USE :

  - Lift the ring to bring the kneecap into line with the gas jack. Insert the gas jack into the kneecap (you will hear a « click »).

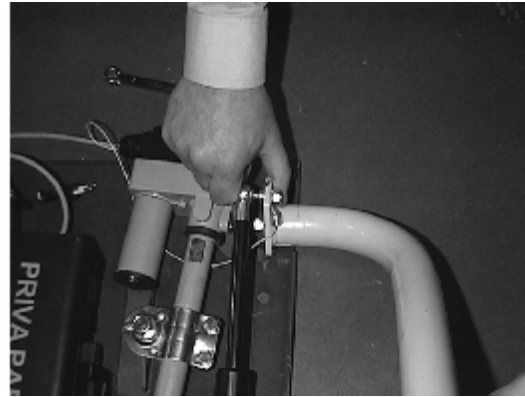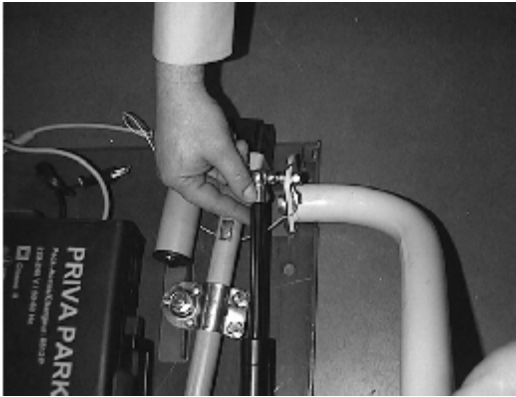

- Put the suitcase into place. Please check that nothing is hampering the movement of the ring.
- Connect the electric jack cable to the suitcase. At this moment, **PRIVA PARK**[®] ring will move up and down briefly.
- Press the remote control button. The ring will go down, this means that **PRIVA PARK**[®] has accepted the code of the remote control. Then **PRIVA PARK**[®] will automatically go up and down. Don't jam the ring during this operation, because it is at this time that it calculates its parameters.
- Press the remote control button, **PRIVA PARK**[®] ring rises. Wait until the end of the operation.
- Press the remote control again and **PRIVA PARK**[®] goes down.
- The ring will change direction the first time you stop it. You must then stop again to immobilise completely.
- You can replace the cover, you just have to slip it on the notches, which are on the steel base.
- Press the remote control, **PRIVA PARK**[®] is ready to operate.



C) TECHNICAL USING

PRIVA PARK® displays the condition of the battery. When it needs recharging, **PRIVA PARK®** stops twice for 2 seconds each operation. That means that you have to recharge your battery. If you continue using it nevertheless, when the battery is flat, **PRIVA PARK®** automatically goes in the intermediate position to release the cover. Your **PRIVA PARK®** can no longer work, in order to protect your battery.

You can adjust the intermediate position , which allows you to open the cover, if you press the remote control button.

After battery charging, the system has to be re-started as described in the installation section (p 3).

D) RECHARGING THE BATTERIES

- Stop the ring with your hand (as described in paragraph b, page 3).
- Slip the cover toward the opposite side of the ring to open **PRIVA PARK®** .
- Disconnect the electric jam from the suitcase by unscrewing.



- Take the suitcase



- You can unclip the gas jack and place the cover in order to park your vehicle in its place during the charge of batteries.
- Connect the mains record to a 220 Volts 50 Hertz socket.
- .The LED which is on the side of the suitcase lights up.
- Let it recharge for 12 hours.
- Full charge is signalled by the LED going off..
- Refer to paragraph B to follow up

The batteries are sensitive to the cold.

If you live in a cold country, we advise you to recharge your battery before each winter.

E) THE REMOTE CONTROL

*If you lose or if someone steals your remote control, please contact your retailer. He can release your **PRIVA PARK®**.*

F) THE GUARANTEE

The guarantee is 1 year, freight charges for the sender. All of theses points lead the cancellation of the warranty :

- *installation not in accordance with the manufacturer*
- *mechanical parts of the system broken by a bump*
- *vandalism*
- *bumps during the transport*
- *opening of the electrical suitcase*
- *using of another power as the suitcase*
- *intervention on electronics or mechanical parts.*